

IUSBDAQ for Vista, Windows 7, both 32bit and 64bit OS installation guide

1. Download vista, windows 7 iUSBDAQ driver from HYTEK Website:

http://www.hytekautomation.ca/USBDAQ_API.aspx?productId=7

2. Install the driver.
3. Plug in the iUSBDAQ now. If this is your first time to install iUSBDAQ driver on this USB port, windows will prompt saying “ found new hardware”, don’t use automatically install option, instead telling windows that you have driver files. Then point to the C:\HYTEK USB Devices (default iUSBDAQ driver install folder), click next to install the driver. If windows prompt to say this is not signed driver, just click OK and continue to finish the installation.

If you have previously installed a Winxp or older version of iUSBDAQ driver, go to device manager, right click on the iUSBDAQ, select “Property”->”Update Driver”, point the driver path to C:\HYTEK USB Devices (default iUSBDAQ driver install folder), to upgrade the driver.

4. Now you should see iUSBDAQ listed in the device manager and iDAQTest&Log software will work too.